



Pascal

Cartridge filtration system for dry dusts and smokes



Pascal

The new Pascal filter series are designed for the filtration of dust and smoke deriving from many machining processes.

The filtration module has specially been conceived for the industrial sector, where its important features lie in sturdiness, reliability and easiness of running and maintenance.

It is available in 3 sizes with flow rates ranging from 3.000 to 9.000 m³/h and with increasing filtration efficiency rates to reach 99,97%.




LOSMA grants that every single system is tested through strict control procedures.

Every unit is provided with a qualitative and functional test certificate.





Working principles

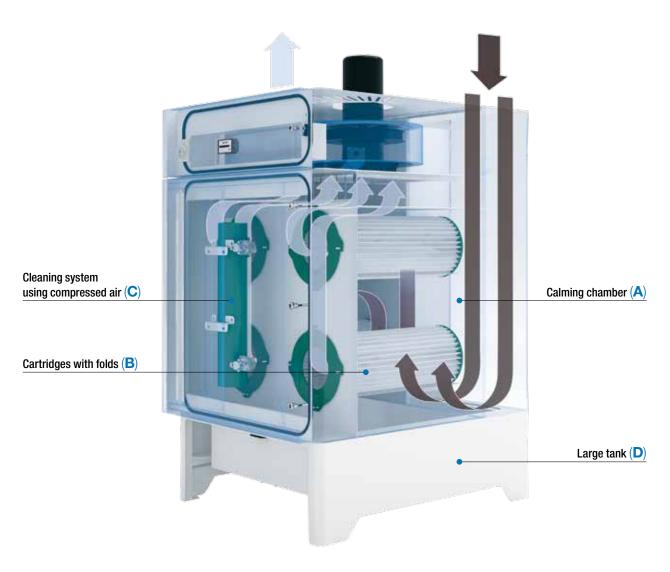

- The air entry section, which connects the piping to the filter, consists in a large section which serves as a calming chamber (A).
- The following area consists of a chamber which houses the filter elements, cartridge with folds (B) with a high filtration surface, with F9 efficiency of 95%, withholding the finer impurities.
- These cartridges are kept in perfect conditions from a programmable electronic cleaning system using compressed air (C) for counter-washing, which monitors continuously ΔP and manage sequentially the opening of electro-valves and the consequent cleaning cycles conserving
- compressed air consumption, contained in the storage reservoir. The program controller is equipped with a visual display for the visualization of main functionalities and the alarm limit planning.
- The horizontal positioning of cartridges allows fast and quick maintenance, access to the filtration chamber is possible through a hinged door. Filter removal is easy, quick and clean, because the dirty chamber is separated from the clean section by a panel which also serves as a support structure for the filter elements. Dust is collected in a large tank (D), which can easily be moved with mechanical lift.

Plus



VERSATILITY AND MODULARITY

The use of filters with increasing filtration efficiency rate allows the implementation of Pascal in all modern mechanical machining, from the more simple to heavy duty operations. The 3 different available versions and relative suction power of Pascal enable to choose a solution which is always relevant to specific requirements without energy waste for oversized systems or, on the contrary, for systems which are not adequately dimensioned.



PROGRAMMABLE ELECTRONIC SYSTEM

Permits the cleaning in counter-washing of cartridges using compressed air. It monitors continuously the ΔP and manages the sequential opening of electro-valves and the cleaning cycles. In this way the system economize the compressed air contained into the tank. It has a digital display to visualize the main functions and setting the alarm limit.



GREAT SUCTION POWER

the use of high efficiency centrifugal fans and the high flow rates generated enable the Pascal series to be implemented for suction and filtration of large machine tools and for centralized systems.




FAST AND EASY MAINTENANCE

Access to the filtration section is very easy and quick, without having to unscrew or disassemble anything. Simply unlock and open the hinged door to access the filters, which can easily be extracted and replaced in a short time.



Technical data

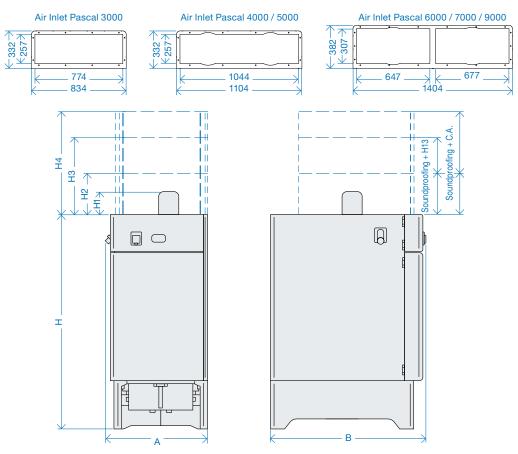

MODELS	Dimensions (mm)									
	Α	В	н	H1	H2	Н3	H4			
PASCAL 3000	1000	1420	1940	195	380	710	930			
PASCAL 4000	1200	1470	1940	240	380	710	930			
PASCAL 5000	1200	1470	1940	255	380	710	930			
PASCAL 6000 (*)	1500	1520	2450	170	650	980	1200			
PASCAL 7000 (*)	1500	1520	2450	195	650	980	1200			
PASCAL 9000 (*)	1500	1520	2450	305	650	980	1200			

^{*}With external electrical panel.

MODELS	Max air flow* (m³/h)	Head (mmH ₂ O)	Power (kW)	N° Cartridges	Filtration surface	Noise level (dBa)**	RPM (rpm)	
	50 (Hz) / 60 (Hz)		50 (Hz) / 60 (Hz)		(m^2)		50 (Hz)	60 (Hz)
PASCAL 3000	3000	180	2,2	3	36	<80	2850	3420
PASCAL 4000	4000	160	3	4	48	<80	2900	3480
PASCAL 5000	5000	240	4	5	60	<80	2910	3490
PASCAL 6000 (*)	6000	180	5,5	6	72	<80	2890	3470
PASCAL 7000 (*)	7000	280	7,5	7	84	<80	2890	3470
PASCAL 9000 (*)	9000	170	11	9	108	<80	2930	3520

 $[\]hbox{*With external electrical panel.} \quad \hbox{*With soundproofing box. (Excluding cleaning phase)}$

Optional

Absolute filter H13

To obtain a very high filtration level, 99,97% according to norm EN 1822. Particularly suitable for micro-mists and smokes.

Carbon filter

Activated carbons for removal of odors from previously filtered air.



Installations






Pascal-M



Working principles

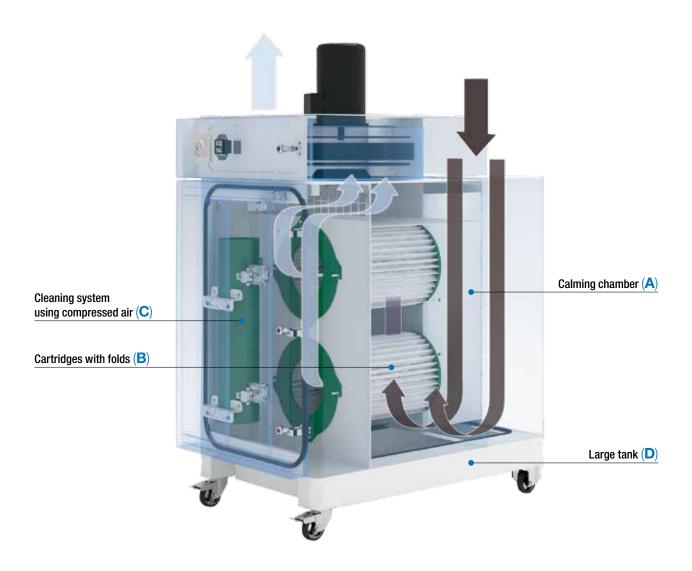

- The air entry section, which connects the piping or the suction arm (optional), consists in a large section which serves as a calming chamber (A).
- The following area consists of a chamber which houses the filter elements, cartridge with folds (B) with a high filtration surface, with F9 efficiency of 95%, withholding the finer impurities.
- These cartridges are kept in perfect conditions from a cleaning system (optional) using compressed air (C), consisting in a Timer which manage the opening of the

- electro-valves positioned on the storage reservoir and the cleaning cycles.
- The horizontal positioning of cartridges allows a fast access and a quick maintenance, access to the filtration chamber is possible through a hinged door. Filter removal is easy, quick and clean, because the dirty chamber is separated from the clean section by a panel which also serves as a support structure for the filter elements. Dusts are collected in a collection tank (D), which can easily be removed and emptied. The filtration group is equipped with a trolley in order to be moved into the workshop.



Plus



VERSATILITY AND MANEUVERABILITY

Pascal-Mis available in two versions with different flow rates and can be equipped with different post-filtration accessories and an articulated arm. It is mounted on a trolley allowing an easy transport.



LONG LASTING FILTERS

The wide filtration surface used and the automatic cleaning system (optional) grants long lasting filters and saving for spare parts and maintenance management.



GREAT SUCTION POWER


The use of high efficiency centrifugal fans allows Pascal-M to generate great suction powers with reduced energy consumption.





FAST AND EASY MAINTENANCE

Access to the filtration section is very easy and quick, without having to unscrew or disassemble anything. Simply unlock and open the hinged door to access the filters, which can easily be extracted and replaced in a short time.

Technical data



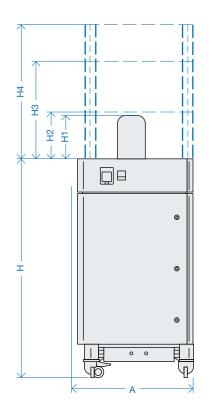

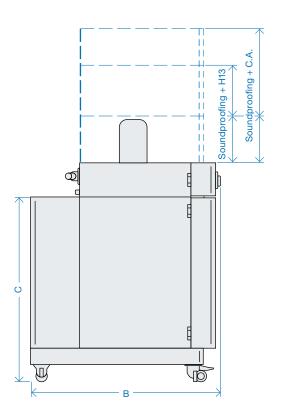

MODELS	Dimensions (mm)										
	Α	В	С	H	H1	H2	Н3	H4			
PASCAL 1500 M	800	1200	1200	1400	250	300	630	850			
PASCAL 2500 M	800	1200	1200	1400	300	300	630	850			

MODELLI	Max air flow* (m³/h)	Head (mmH ₂ O)	Power (kW)	N° Cartridges	Filtration surface	Noise level (dBa)**	RPM (rpm)	
	50 (Hz) / 60 (Hz)		50 (Hz) / 60 (Hz)		(m^2)		50 (Hz)	60 (Hz)
PASCAL 1500 M	1500	123	1,1	1	10	<80	2840	3410
PASCAL 2500 M	2500	101	1,5	2	20	<80	2840	3410

 $[\]ensuremath{^{**}}\xspace$ With sound proofing box. (Excluding cleaning phase)



Optional



Installations













Health

Savings

Efficiency

Environment

Safety



Losma SpA - Via E. Fermi, 16 24035 Curno (BG) - Italia Cap.Soc. I.V. Euro 500.000,00 Reg. imp. e P.IVA e C.F. 01234590162 R.E.A. 185685







ISO 14001 TÜV SÜD Certified Company



Autorizzato all'utilizzo



Losma Engineering - Torino www.losma.it



Germany - Losma GmbH www.losma.de



USA - Losma Inc www.losma.com



UK - Losma UK Limited www.losma.co.uk



India - Losma India Pvt Ltd www.losma.co.in